

CosyFloor®

neoStat Pro Smart Thermostat




Specifications


Temperature Range	5-35°C, 41-95°F	Frost Protection (5°C - 17°C)	Y
LED Screen	Y	Mesh Networking Facility	Y
Non-Programmable Mode (Default)	Y	°C / °F Option	Y
5/2 Day Programming Mode (with neoHub)	Y	Built In Air Sensor	Y
7 Day Programming Mode (with neoHub)	Y	Remote Air Sensing Mode	Y
24 Hour Mode (with neoHub)	Y	Floor Sensing Mode	Y
Number of Heating Levels (with neoHub)	4 or 6	Remote Probe Included	N
Optimum Start (with neoHub)	Y	Floor Temp Limit Protection	Y
Timer Mode	N	Max Switching Current	3A Resistive
Holiday Function (with neoHub)	Y	Accuracy +/-	1°C
Keylock Function (with neoHub)	Y	Adjustable Switching Differential	1°C - 3°C
Temperature Hold Function (with neoHub)	Y	Supply	230V AC
Temperature Override	Y	Installed Dimensions	85 x 85 x 11mm (L,H,D)
Temperature Override Limit (with neoHub)	Y	Weight	137g
Output Delay (with neoHub)	Y		

Feature Table - Thermostat Mode (App Accessible only via neoHub)

DESCRIPTION	SETTING OPTIONS	DESCRIPTION	SETTING OPTIONS
Switching Differential	0.5°C, 1.0°C (Default), 2.0°C, 3.0°C	Floor Temperature Limit	20° - 45°C (28°C = Default)
Frost Protection Temperature	07° - 17°C (12°C = Default)	Cool Enable	Enable/Disable
Output Delay	00 - 15 Minutes (00 = Default)	Optimum Start	00 - 05 Hours (00 = Default)
Up/Down Temperature Limit	00° - 10°C (00 = Default)	Rate of Change	Minutes to raise by 1°C
Sensor Selection	Built In Sensor (Default), Remote Air Sensor Only, Floor Sensor Only, Built In & Floor Sensor, Remote Air & Floor Sensor	Program Mode	Non-Programmable, Weekday/Weekend (Default), 7 Day Programming, 24 Hour Mode
Dew Point	Enable/Disable	Temperature Format	00 = °C, 01 = °F (00 = Default)

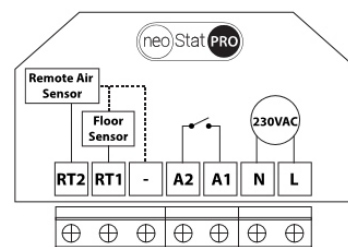

Wiring Detail

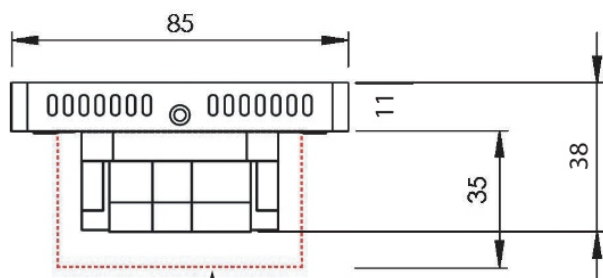

Back Box Area ↑

Note: Fits standard 35mm depth back box

